

SONY

Cyber-shot

Digital Still Camera/Cámara fotografía digital

Instruction Manual

Manual de instrucciones

DSC-H3



LITHIUM ION

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

En la página Web de atención al cliente puede encontrar información adicional sobre este producto y respuesta a las preguntas hechas con más frecuencia.

<http://www.sony.net/>



Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Impreso en papel reciclado en un 70% o más utilizando tinta hecha con aceite vegetal exento de compuesto orgánico volátil (COV).

Printed in Japan



3268885620



For details on advanced operations, please read "**Cyber-shot Handbook**" (PDF) and "**Cyber-shot Step-up Guide**" on the CD-ROM (supplied) using a computer.

Para obtener más información acerca de las operaciones avanzadas, consulte mediante un ordenador la "**Guía práctica de Cyber-shot**" (PDF) y la "**Guía avanzada de Cyber-shot**" que encontrará en el CD-ROM (suministrado).

Operating Instructions

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

Manual de instrucciones

Antes de utilizar la unidad, lea detenidamente este manual y consérvelo para consultarlo en el futuro.

© 2007 Sony Corporation

3-268-895-62(1)

English

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-H3

Serial No. _____

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

For Customers in the U.S.A.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

Use

Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

Installation

Water and Moisture

Do not use power-line operated sets near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for

long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance - this indicates a need for service.

Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.

Read this first

CAUTION

Replace the battery with the specified type only. Otherwise, fire or injury may result.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

For Customers in the U.S.A. and Canada

RECYCLING LITHIUM-ION BATTERIES

Lithium-ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbr.org/>

Caution: Do not handle damaged or leaking Lithium-ion batteries.

Battery charger

This power unit is intended to be correctly orientated in a vertical or floor mount position.

For Customers in the U.S.A.

If you have any questions about this product, you may call:

Sony Customer Information Center
1-800-222-SONY (7669)

The number below is for the FCC related matters only.

Regulatory Information

Declaration of Conformity

Trade Name: SONY
Model No.: DSC-H3
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo,
San Diego, CA 92127 U.S.A.
Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For the State of California, USA only

Perchlorate Material - special handling may apply, See

www.dhs.gov/hazardouswaste/perchlorate

Perchlorate Material: Lithium battery contains perchlorate.

For Customers in Europe

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Notice

If static electricity or electromagnetic causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

1 Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an Ⓢ or Ⓢ mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

Table of contents

IMPORTANT SAFEGUARDS	2
Read this first	4
Notes on using the camera	8
Getting started	9
Checking the accessories supplied	9
1 Preparing the battery pack	10
2 Inserting the battery pack/a "Memory Stick Duo" (not supplied)	11
3 Turning the camera on/setting the clock	13
Shooting images easily	14
Mode dial/Zoom/Flash/Macro/Self-timer/Display/Lens hood	15
Viewing/deleting images	17
Learning the various functions – HOME/Menu	19
Using the HOME screen	19
HOME items	20
Using menu items	21
Menu items	22
Enjoying your computer	23
Supported Operating Systems for USB connection and application software (supplied)	23
Viewing "Cyber-shot Handbook"	24
Indicators on the screen	25
Battery life and memory capacity	27
Battery life and number of images you can record/view	27
Number of still images and recording time of movies	28
Troubleshooting	30
Battery pack and power	30
Shooting still images/movies	31
Viewing images	31
Precautions	32
Specifications	33

Notes on using the camera

Internal memory and "Memory Stick Duo" back up

Do not turn off the camera, remove the battery pack, or remove the "Memory Stick Duo" while the access lamp is lit. Otherwise, the internal memory data or "Memory Stick Duo" may be damaged. Be sure to make a backup copy to protect your data.

Notes on recording/playback

- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof. Read "Precautions" (page 32) before operating the camera.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 32).
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.
- When the battery level becomes low, the lens might stop moving. Insert a charged battery pack and turn on the camera again.

On image data compatibility

- The camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Sony does not guarantee that the camera will play back images recorded or edited with other equipment, or that other equipment will play back images recorded with the camera.

Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

Getting started

Checking the accessories supplied

- Battery charger BC-CSG/BC-CSGB/BC-CSGC (1)



- Power cord (mains lead) (1) (not supplied in the USA and Canada)



- Rechargeable battery pack NP-BG1 (1)/Battery case (1)



- USB, A/V cable for multi-use terminal (1)



 
- Shoulder strap (1)



- Lens hood (1)/Adaptor ring (1)



- Lens cap (1)/Lens cap strap (1)

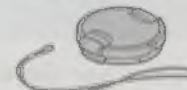


- CD-ROM (1)

- Cyber-shot application software
- "Cyber-shot Handbook"
- "Cyber-shot Step-up Guide"

- Instruction Manual (this manual) (1)


Attaching the shoulder strap and the lens cap

 Attach the strap to prevent the camera from damage by being dropped.

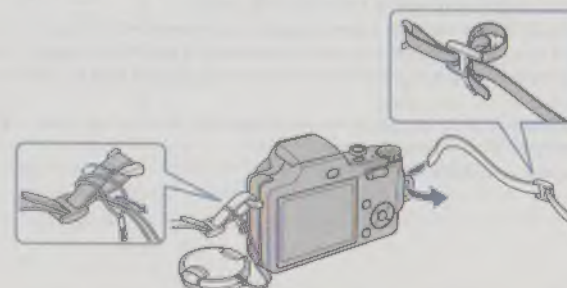


1 Preparing the battery pack

 For customers in the USA and Canada

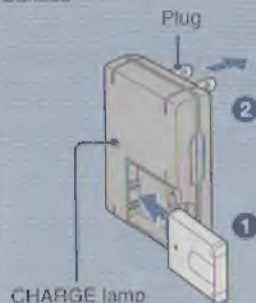

 For customers in countries/regions other than the USA and Canada

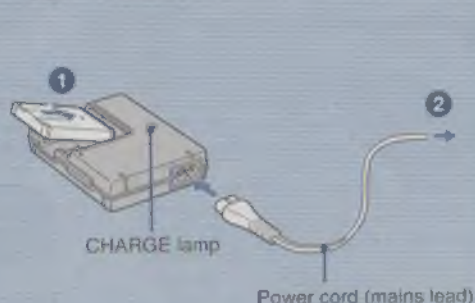

1 Insert the battery pack into the battery charger.

2 Connect the battery charger to the wall outlet (wall socket).

The CHARGE lamp lights up, and charging starts.

When the CHARGE lamp turns off, charging is finished (Practical charge).


If you continue charging the battery pack for about one more hour (until it is fully charged), the charge will last slightly longer.

Charging time

Full charge time	Practical charge time
Approx. 330 min.	Approx. 270 min.

- The table above shows the time required to charge a fully depleted battery pack at a temperature of 25 °C (77 °F). Charging may take longer depending on conditions of use and circumstances.
- See page 27 for the number of images that can be recorded.
- Connect the battery charger to the nearest wall outlet (wall socket).
- Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- Designed for use with compatible Sony batteries.

 2 Inserting the battery pack/a "Memory Stick Duo" (not supplied)

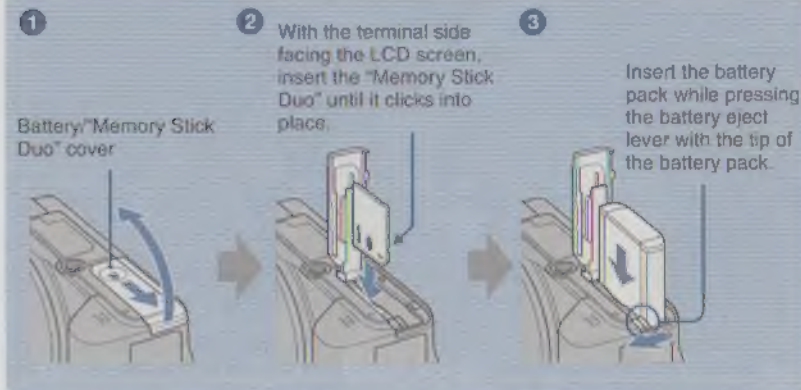

1 Open the battery/"Memory Stick Duo" cover.

2 Insert the "Memory Stick Duo" (not supplied).

3 Insert the battery pack.

4 Close the battery/"Memory Stick Duo" cover.

When there is no "Memory Stick Duo" inserted

The camera records/plays back images using the internal memory (approx. 31 MB).

To check the remaining battery charge

Press POWER to turn on and check the remaining battery charge on the LCD screen.


Remaining charge indicator					
Status	Sufficient power remaining	Battery almost fully charged	Battery half full	Battery low, recording/playback will stop soon.	Change the battery with fully charged one, or charge the battery. (The warning indicator flashes.)

- It takes about one minute until the correct remaining charge indicator appears.
- The remaining charge indicator may not be correct depending on conditions of use and circumstances.
- The Clock Set screen appears when you turn on the camera for the first time (page 13).

! To remove the battery pack/"Memory Stick Duo"


Open the battery/"Memory Stick Duo" cover.

 "Memory Stick Duo"

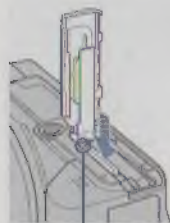

Make sure that the **access lamp** is not lit, then push the "Memory Stick Duo" in once.

 
Battery pack

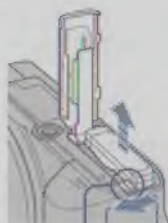

Slide the **battery eject lever**. Be sure not to drop the battery pack.

• Never remove the battery pack/"Memory Stick Duo" when the access lamp is lit. This may cause damage to data in the "Memory Stick Duo"/internal memory.

 3 Turning the camera on/setting the clock

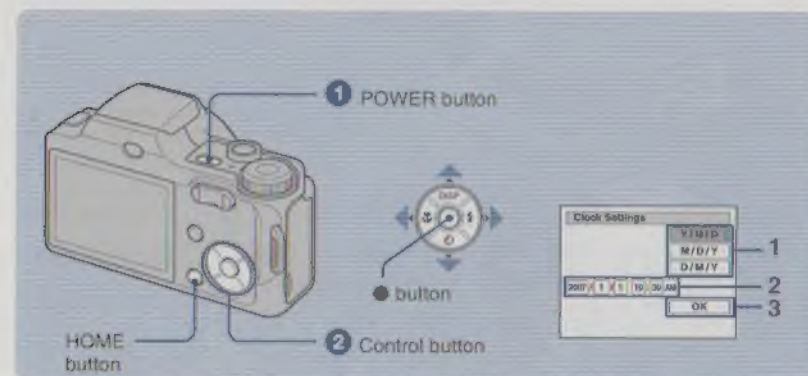

1 Press POWER.

2 Set the clock with the control button.

- 1 Select the date display format with $\blacktriangle/\blacktriangledown$, then press \bullet .
- 2 Select each item with $\blacktriangle/\blacktriangledown$ and set the numeric value with $\blacktriangle/\blacktriangledown$, then press \bullet .
- 3 Select [OK], then press \bullet .

 
! To change the date and time

Press HOME, and select [Clock Settings] in [Settings] (pages 19, 20).

! Notes on when the power is turned on

- Once the battery is inserted in the camera, it may take time before operation becomes possible.
- If the camera is running on battery power and you do not operate the camera for about three minutes, the camera turns off automatically to prevent wearing down the battery pack (Auto power-off function).

Shooting images easily

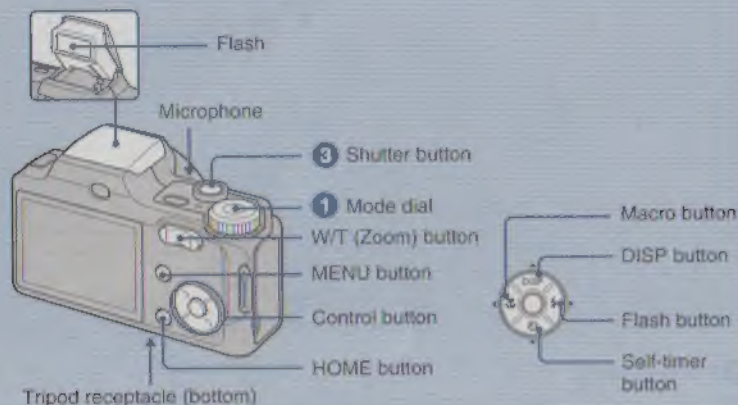

1 Select the desired function from the mode dial.

When shooting still images (Auto Adjustment mode): Select .
When shooting movies: Select .

2 Hold the camera, with your elbows pressed against your body to steady it.



Position the subject
in the center of the
focus frame.

3 Shoot with the shutter button.

When shooting still images:

- 1 Press and hold the shutter button halfway down to focus.
The ● (AE/AF lock) indicator (green) flashes, a beep sounds, the indicator stops flashing and remains lit.
- 2 Press the shutter button fully down.



AE/AF lock indicator

When shooting movies:

Press the shutter button fully down.
To stop recording, press the shutter button fully down again.

Mode dial/Zoom/Flash/Macro/Self-timer/Display/Lens hood

Using the mode dial

Set the mode dial to the desired function.

Auto Adjustment

Allows easy shooting with the settings adjusted automatically.

Program Auto

Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). You can adjust other settings using the menu.

Manual Exposure shooting

Allows you to shoot after adjusting the exposure manually.

Movie mode

Allows you to record movies with audio.

High Sensitivity

Shoots images without a flash even in low lighting.

Soft Snap

Shoots images with a softer atmosphere for portraits of people, flowers, etc.

Advanced Sports Shooting

Shoots images by predicting the movement of the subject and setting focus.

Twilight Portrait

Shoots sharp images of people in a dark place without losing the nighttime atmosphere.

Landscape

Shoots with the focus on a distant subject.

SCN* Scene Selection

Selects a setting from the Scene Selection menu.

* Scene Selection in SCN mode

Press MENU and select a setting.

Twilight

Shoots night scenes without losing the nighttime atmosphere.

Beach

Shoots seaside or lakeside scenes with the blueness of the water captured more vividly.

Snow

Shoots snow scenes in white more clearly.

Fireworks

Shoots fireworks in all their splendor.

W/T Using the zoom

Press T to zoom, press W to undo zoom. Pressing the button slightly zooms slowly and pressing the button fully down zooms fast.

Flash (Selecting a flash mode for still images)

Press (F) on the control button repeatedly until the desired mode is selected.

Flash Auto

Flashes when there is insufficient light or backlight (default setting)

Flash forced on

Slow synchro (Flash forced on)

The shutter speed is slow in a dark place to clearly shoot the background that is out of flash light.

Flash forced off

* The flash automatically pops up and strobes when using the flash. Close the flash by hand after use.

Macro (Shooting close-up)

Press on the control button repeatedly until the desired mode is selected.

: Macro off

: Macro on (W side: Approx. 2 cm or farther (13/16 inches or farther), T side: Approx. 90 cm or farther (2 feet 11 1/2 inches or farther))

Using the self-timer

Press on the control button repeatedly until the desired mode is selected.

: Not using the self-timer

: Setting the 10-second delay self-timer

 
: Setting the 2-second delay self-timer

When you press the shutter button, the self-timer lamp flashes and a beep sounds until the shutter operates.



DISP Changing the screen display


Press (DISP) on the control button. Each time you press (DISP), the display and brightness changes as follows:

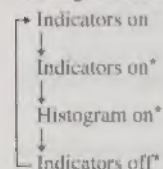


* The brightness of the LCD Backlight up.

Attaching the lens hood

 1 Attach the adaptor ring while the power is off.

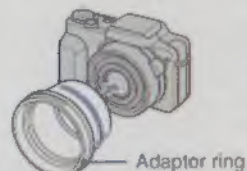

 2 Position the lens hood as shown below and turn the lens hood clockwise until it clicks.

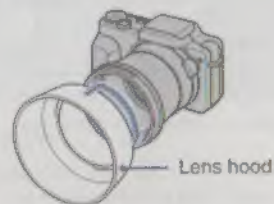


Storing the lens hood

Position the lens hood as shown below and turn the lens hood clockwise until it clicks.



 Viewing/deleting images

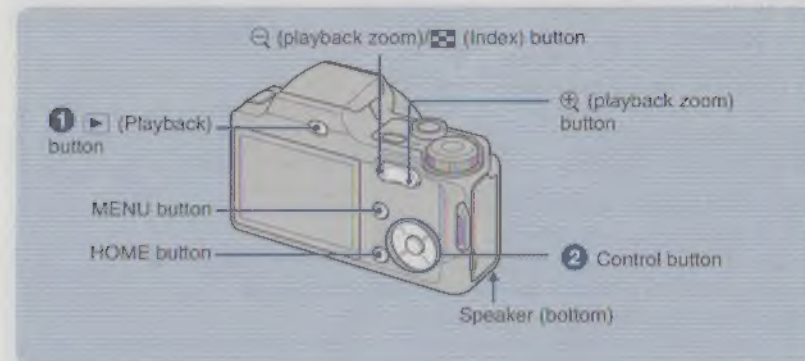

1 Press (Playback).

If you press when the camera is powered off, the camera is turned on automatically and set to playback mode. To switch to the shooting mode, press again.

2 Select an image with / on the control button.

Movie:

Press to play back a movie. (Press again to stop playback.)

Press to fast forward, to rewind. (Press to return to normal playback.)

Press to display the volume control screen, then press to adjust the volume.

To delete images

1 Display the image you want to delete, then press MENU.

2 Select [Delete] with and select [This Image] with , then press .

3 Select [OK] with , then press .

To view an enlarged image (playback zoom)

 
Press while displaying a still image. To undo the zoom, press .

Adjust the position with , , , .

To cancel the playback zoom, press .

Using the HOME screen

The HOME screen is the gateway screen for all the functions of the camera, and can be called up regardless of the mode setting (shooting/viewing).

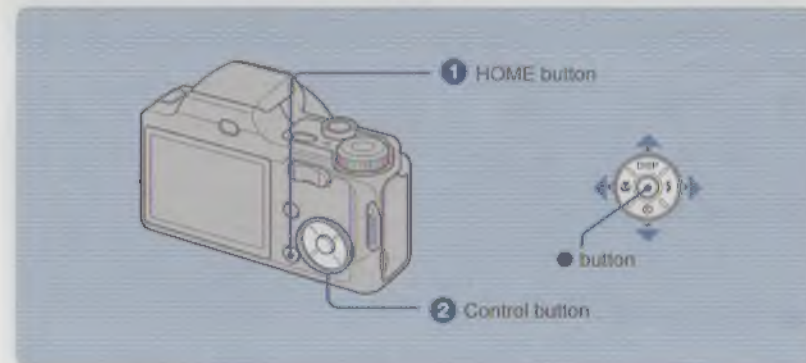


1 Press HOME to display the HOME screen.



2 Select a category with ◀/▶ on the control button.

3 Select an item with ▲/▼, then press ●.

 When you select the (Manage Memory) or (Settings) category

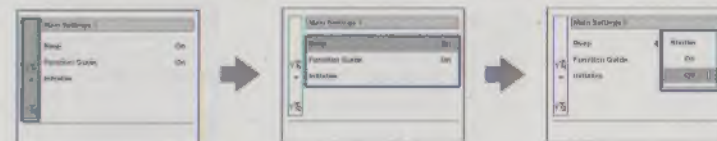

1 Select the desired item with ▲/▼.

• This is functional only when you select (Settings).

2 Press ▶ and select the desired setting with ▲/▼, then press ●.

3 Select a setting with ▲/▼, then press ●.

• The camera is set to the shooting or viewing mode by pressing HOME again.

To view an index screen

Press (Index) to display the index screen while a still image is displayed.

Then, select an image with ▲/▼/◀/▶.

To return to the single image screen, press ●.

• You can also access the index screen by selecting [Index Display] in (View Images) on the HOME screen.

• Each time you press (Index), the number of images on the index screen increases.

To delete images in index mode

1 Press MENU while the index screen is displayed.

2 Select [Delete] with ▲ and select [Multiple Images] with ◀/▶, then press ●.

3 Select the image you want to delete with ▲/▼/◀/▶, then press ●.

The ✓ mark is checked in the checkbox of the image.

To cancel a selection, select an image you have selected for deletion, then press ● again.

4 Press MENU and select [OK] with ▲, then press ●.

• To delete all the images in a folder, select [All In This Folder], then press ● in step 2.

 
To play back a series of images (Slide Show)

1 Select [Slide Show] in (View Images) on the HOME screen.

2 Select [Start] with ▲, then press ●.

To view Images on TV

Connect the camera to the TV with the cable for multi-use terminal (supplied).

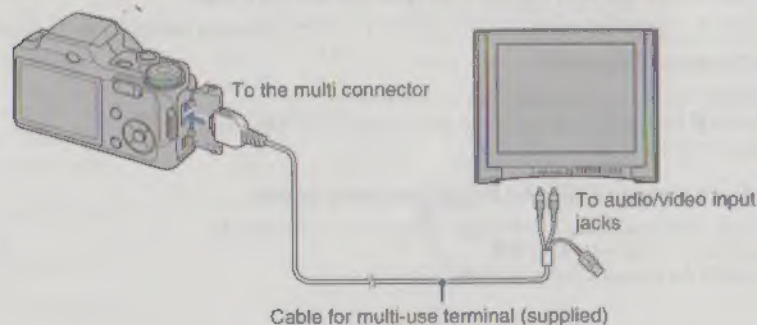






To view on HD (High Definition) TV, an HD Output Adaptor Cable (not supplied) is needed.

• If you set the image size to [16:9], you can record images in the size that fills the entire screen of the HD TV.


• You cannot view movies output in [HD (1080i)] signal format.

HOME items

Pressing HOME displays the following items. Details on the items are displayed on the screen by the guide

Categories	Items
 Shooting	Shooting
 View Images	Single Image Index Display Slide Show
 Printing, Other	Print Music Tool Download Music Transfer Music
 Manage Memory	Memory Tool Memory Stick Tool Format Change REC. Folder Create REC. Folder Copy Internal Memory Tool Format
 Settings	Main Settings Main Settings 1 Beep Initialize Function Guide Main Settings 2 USB Connect Video Out COMPONENT SHOOTING SETTINGS SHOOTING SETTINGS AF Illuminator AF Mode Conversion Lens Grid Line Digital Zoom Shooting Settings 2 Auto Review Clock Settings Language Setting

 Using menu items

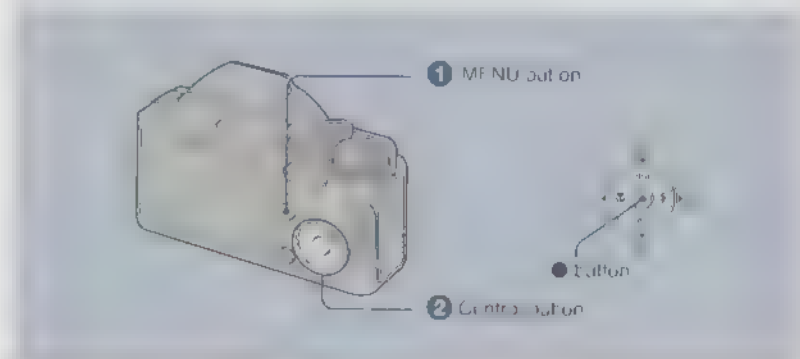

1 Press MENU to display the menu.



Function Guide

- The menu will be displayed only during shooting and playback mode
- Different items will become visible depending on the selected mode

2 Select a desired menu item with Δ/∇ on the control button.

- If the desired item is hidden, keep pressing Δ/∇ until the item appears on the screen

3 Select a setting with \leftarrow/\rightarrow .

- If the desired item is hidden, keep pressing \leftarrow/\rightarrow until the item appears on the screen
- Select an item in playback mode, and press \bullet

4 Press MENU to turn off the menu.

Menu items

The available menu items vary depending on the mode setting (shoot or viewing), and the mode dial position in the shooting mode. Only the available items are displayed on the screen.

Shooting menu

Scene Selection	Selects the settings pre-adjusted to match various scene conditions.
Image Size	Selects the still image size.
Color Mode	Changes the vividness of the image or adds special effects.
EV	Adjusts Exposure.
Metering Mode	Selects the metering mode.
Flash Level	Adjusts the amount of flash light.
Red Eye Reduction	Sets to reduce the red-eye phenomenon.
Contrast	Adjusts the contrast of the image.
Sharpness	Adjusts the sharpness of the image.
SteadyShot	Selects the anti-blur mode.
SETUP	Selects shooting settings.

Viewing menu

(Delete)	Deletes images.
(Slide Show)	Plays back a series of images.
(Retouch)	Retouches images.
(Protect)	Prevents accidental erasure.
DPOF	Adds a Print order mark on image that you want to print out.
(Print)	Prints images using a PictBridge compliant printer.
Rotate)	Rotates a still image.
(Select Folder)	Selects the folder for viewing images.

Enjoying your computer

You can view images shot with the camera on a computer. By using the software in the CD-ROM (supplied), you can enjoy still images and movies from the camera more than ever. For details, refer to "Cyber shot Handbook" in the CD-ROM (supplied).

Supported Operating Systems for USB connection and application software (supplied)

	For Windows users	For Macintosh users
SR	Windows 98/98SE/Me/NT/XP/2000/Vista Windows XP SP2/Windows Vista*	Mac OS 9/10.2/Mac OS X 10.4
Application software	Windows 98/98SE/Me/NT/XP/2000/Vista Windows XP SP2/Windows Vista*	Mac OS 9/10.2
browser	Vista*	

* 64-bit editions and Starter (Edition) are not supported.

 
- For details on the supported operating systems, please refer to the "Cyber shot Handbook" in the CD-ROM (supplied).
- For details on the supported operating systems, please refer to the "Cyber shot Handbook" in the CD-ROM (supplied).
- For details on the supported operating systems, please refer to the "Cyber shot Handbook" in the CD-ROM (supplied).

Viewing "Cyber-shot Handbook"

Cybernet Handbook and the CD-ROM simplified extensions now described. Extra material Adobe Reader's equivalent view.

For Windows users

- ```
1 function compInsertion(
ROMopt, l, t, Lx, C) ROMacc
Lmax ← max(Lx)
for i = 0 to Lmax
```

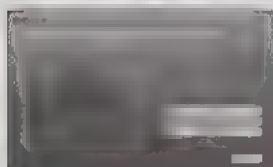

WILEY-INTERSCIENCE, INC. 605 Third Avenue, New York, N.Y. 10016  
 • 115 10-A-1 5 132 5 30 205  
 Handbook\*\* appears.

- 2 Follow the online instructions to buy
- When you visit "Cyber-shot Handbook," the "Cyber-shot Step-up Guide" will be needed information.
- 3 At the bottom of the page, click the link to order the book.

### For Macintosh users

1. Turn on your computer and select the IBM *My First C++* CD-ROM drive.
2. Select the [Program] folder, then copy the [Book] folder to the C: drive to your computer.
3. A copy of the compressed book folder [Book] will be created.

 
### Indicators on the screen

Each time you press **▲** (DISP) on the control button, the display changes



### When shooting still images



### When shooting movies

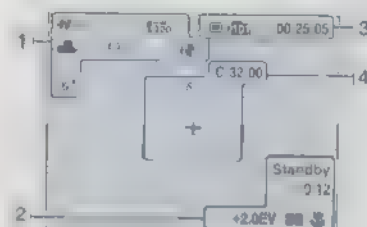

**When playing back**

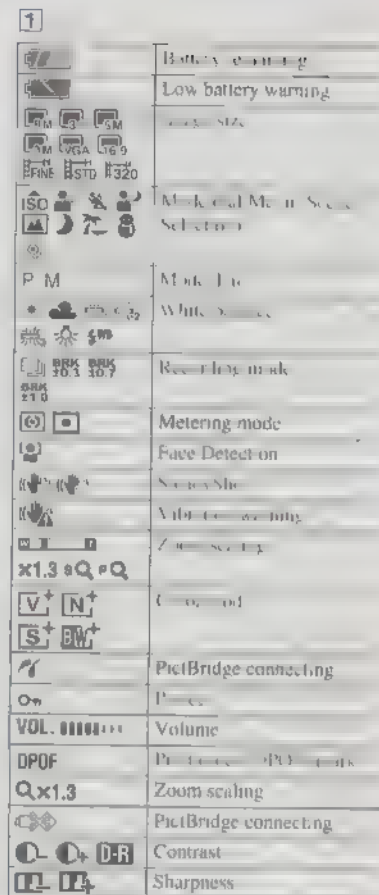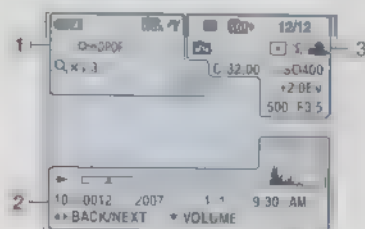  

## Battery life and number of images you can record/view

The numbers shown in the following tables assume a fully charged battery pack (supplied) is used at an ambient temperature of 25 °C (77 °F). The numbers shown for images you can record/view are approximations and allow for changing of the "Memory Stick Duo" as necessary. Note that the actual numbers may be less than those indicated in the table depending on the conditions of use.

### When shooting still images

| Battery life (min) | No. of images |
|--------------------|---------------|
| Approx. 165        | Approx. 1400  |

- Shooting in the following situations:
  - [REC Mode] is set to [Normal]
  - [AF Mode] is set to [Single]
  - [SteadyShot] is set to [Shooting]
  - Shooting once every 30 seconds
  - The zoom is switched alternately between the W and T ends
  - The flash strobes once every two times.
  - The power turns on and off once every ten times
- The measurement method is based on the CIPA standard (CIPA: Camera & Imaging Products Association)
- The battery life and the number of images do not change regardless of image size

### When viewing still images

| Battery life (min) | No. of images |
|--------------------|---------------|
| Approx. 140        | Approx. 1400  |

- Viewing single images in order at about three second intervals

### Notes on the battery pack

- Battery capacity decreases over time and through repeated use
- The battery life and the number of images you can record/view are decreased under the following conditions:
  - The surrounding temperature is low
  - The flash is used frequently
  - The camera has been turned on and off many times
  - The zoom is used frequently
  - The brightness of LCD Back light is set to up
  - [AF Mode] is set to [Monitor]
  - [SteadyShot] is set to [Continuous]
  - The battery power is low
  - [Face Detection] is set to [On]

2

|  |                                                |
|--|------------------------------------------------|
|  | Manual exposure setting mode                   |
|  | Function guide for Manual exposure             |
|  | Focus preset distance                          |
|  | AE/AF lock                                     |
|  | ISO                                            |
|  | NR slow shutter                                |
|  | Shutter speed                                  |
|  | Aperture value                                 |
|  | Exposure Value                                 |
|  | AF range finder frame                          |
|  | Movie                                          |
|  | Standby/Recording a movie                      |
|  | Recording time (minutes/seconds)               |
|  | Histogram                                      |
|  | [H] appears when histogram display is disabled |
|  | Folder file number                             |
|  | Recorded date/time of the playback image       |
|  | Function guide for playing image               |
|  | Function guide for playing image               |
|  | Selecting images                               |
|  | Adjusting volume                               |

3

|  |                                                           |
|--|-----------------------------------------------------------|
|  | Memory Stick Duo                                          |
|  | Folder file number                                        |
|  | Shutter speed                                             |
|  | Aperture value                                            |
|  | image number/Number of images recorded in selected folder |
|  | Recordable time (hours/minutes/seconds)                   |
|  | Changing folder                                           |
|  | AF                                                        |
|  | Recording                                                 |
|  | Flash charging                                            |
|  | AWB                                                       |
|  | Self-diagnosis display                                    |
|  | ISO                                                       |
|  | Exposure Value                                            |
|  | Shutter speed                                             |
|  | Aperture value                                            |
|  | Conversion lens                                           |

4

|  |                          |
|--|--------------------------|
|  | Self-diagnosis display   |
|  | Self timer               |
|  | AF range finder frame    |
|  | Spot metering cross hair |
|  | Histogram                |



## Number of still images and recording time of movies

The number of still images and the length of time for movies may vary depending on the shooting conditions.

- Even if the capacity of your recording media is the same as the one in the table below, the number of still images and the length of time for movies may be different.
- You can select the image size from the menu (pages 21, 22).

### The approximate number of still images

(Units: Images)

| Capacity<br>Size | Internal memory | "Memory Stick Duo" formatted with the camera |        |        |      |       |       |       |
|------------------|-----------------|----------------------------------------------|--------|--------|------|-------|-------|-------|
|                  | Approx. 31 MB   | 128 MB                                       | 256 MB | 512 MB | 1 GB | 2 GB  | 4 GB  | 8 GB  |
| 8M               | 10              | 40                                           | 72     | 150    | 306  | 618   | 1223  | 2457  |
| 3:2              | 10              | 40                                           | 72     | 150    | 306  | 618   | 1223  | 2457  |
| 5M               | 13              | 51                                           | 92     | 191    | 390  | 787   | 1557  | 3127  |
| 3M               | 21              | 82                                           | 148    | 306    | 626  | 1262  | 2498  | 5017  |
| VGA              | 202             | 790                                          | 1428   | 2941   | 6013 | 12120 | 23980 | 48160 |
| 16:9             | 33              | 133                                          | 238    | 490    | 1002 | 2020  | 3997  | 8027  |

- The numbers of images listed assume [REC Mode] is set to [Normal].
- When the number of remaining shootable images is greater than 9,999, the ">9999" indicator appears.
- When an image was recorded using an earlier Sony model and is played back on the camera, the image may not appear in the actual image size.

### The approximate recording time of movies

The numbers in the table below show the approximate maximum recordable time obtained by totaling all movie files. The maximum length of time you can shoot continuously is about 10 minutes.

(Units: hour : minute : second)

| Capacity<br>Size | Internal memory | "Memory Stick Duo" formatted with the camera |         |         |         |         |          |          |
|------------------|-----------------|----------------------------------------------|---------|---------|---------|---------|----------|----------|
|                  | Approx. 31 MB   | 128 MB                                       | 256 MB  | 512 MB  | 1 GB    | 2 GB    | 4 GB     | 8 GB     |
| 640(Fine)        | —               | —                                            | 0:02:50 | 0:06:00 | 0:12:30 | 0:25:10 | 0:49:50  | 1:40:20  |
| 640(Standard)    | 0:01:30         | 0:05:50                                      | 0:10:40 | 0:22:00 | 0:45:00 | 1:30:50 | 2:59:50  | 6:01:10  |
| 320              | 0:06:00         | 0:23:40                                      | 0:42:50 | 1:28:10 | 3:00:20 | 6:03:30 | 11:59:30 | 24:04:50 |

- Movies with the size set to [640(Fine)] can only be recorded on a "Memory Stick PRO Duo".
- The camera does not support HD recordings or playbacks for movies.

If you experience trouble with the camera, try the following solutions.

**1 Check the items below, and refer to "Cyber-shot Handbook" (PDF).**

If a code such as "C/E:□□:□□" appears on the screen, refer to "Cyber-shot Handbook".

**2 Remove the battery pack, wait for about one minute, re-insert the battery pack, then turn on the power.**

**3 Initialize the settings (page 20).**

**4 Consult your Sony dealer or local authorized Sony service facility.**

Be aware that by sending the camera for repair, you give consent that the contents of the internal memory, Music files may be checked.

## Battery pack and power

### Cannot insert the battery pack.

- Insert the battery pack correctly to push the battery eject lever (page 11).

### Cannot turn on the camera.

- After inserting the battery pack into the camera, it may take a few moments for the camera to power up.
- Insert the battery pack correctly (page 11).
- The battery pack is discharged. Insert charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.
- Use a recommended battery pack (page 9).

### The power turns off suddenly.

- If you do not operate the camera for about three minutes while the power is on, the camera turns off automatically to prevent wearing down the battery pack. Turn on the camera again (page 13).
- The battery pack is dead. Replace it with a new one.

### The remaining charge indicator is incorrect.



- This phenomenon occurs when you use the camera in an extremely hot or cold location.
- A discrepancy arose between the remaining charge indicator and the actual remaining battery charge. Fully discharge the battery pack once, then charge it to correct the indication.
- The battery pack is discharged. Insert the charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.

### Cannot charge the battery pack.

- You cannot charge the battery pack using the AC Adapter (not supplied).

## Shooting still images/movies

### Cannot record images.

- Check the free capacity of the internal memory or "Memory Stick Duo" (page 28). If it is full, do one of the following:
  - Delete unnecessary images (page 17).
  - Change the "Memory Stick Duo".
- You cannot record images while charging the flash.
- When shooting a still image, set the mode dial to a position other than .
- Set the mode dial to  when shooting movies.
- The image size is set to [640(Fine)] when recording movies. Do one of the following:
  - Set the image size to other than [640(Fine)].
  - Insert a "Memory Stick PRO Duo".

### Cannot insert dates on images.


- The camera does not have a feature for superimposing dates on images. By using "Picture Motion Browser", you can print or save images with the date.

### Vertical streaks appear when you are shooting a very bright subject.

- The smear phenomenon is occurring and white, black, red, purple, or other streaks appear on the image. This phenomenon is not a malfunction.

## Viewing images

### Cannot play back images.

- Press  (Playback) (page 17).
- The folder/file name has been changed on your computer.
- Sony does not guarantee playback of image files on the camera if the files have been processed using a computer or recorded with another camera.
- The camera is in USB mode. Delete the USB connection.



## Precautions

### Do not use/store the camera in the following places

- In an extremely hot, cold or humid place  
In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Under direct sunlight or near a heater  
The camera body may become discolored or deformed, and this may cause a malfunction.
- In a location subject to rocking vibration
- Near strong magnetic place
- In sandy or dusty places

Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

### On cleaning

#### Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (not supplied) to remove fingerprints, dust, etc.

#### Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

#### Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish or casing:

- Do not expose the camera to chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.
- Do not touch the camera with any of the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

### On operating temperatures

The camera is designed for use under the temperatures between 0°C and 40°C (32°F and 104°F). Shooting in extremely cold or hot places that exceed this range is not recommended.

### On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

#### If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you shoot with moisture remaining inside the lens, images will not be clear.

### On the internal rechargeable backup battery

The camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera, but the date and time will not be indicated.

#### Charging method of the internal rechargeable backup battery

Insert charged battery pack in the camera, and then leave the camera for 24 hours or more with the power off.

## Specifications

### Camera

#### [System]

Image device: 7.18 mm (1/2.5 type) color CCD,  
Primary color filter

Total pixel number of camera:

Approx. 8 286 000 pixels

Effective pixel number of camera:

Approx. 8 083 000 pixels

Lens: Carl Zeiss Vario-Tessar 10x zoom lens f =  
6.3 – 63 mm (38 – 380 mm when converted to  
a 35 mm still camera) F3.5 – 4.4

Exposure control: Automatic exposure, Scene  
Selection (9 modes)

White balance: Automatic, Daylight, Cloudy,  
Fluorescent 1, 2, 3, Incandescent, Flash

File format (DCF compliant):

Still images: Exif Ver. 2.21 JPEG compliant,  
DPOF compatible

Movies: MPEG1 compliant (Monaural)

Recording media: Internal Memory (approx.  
31 MB), "Memory Stick Duo"

Flash: Flash range (ISO sensitivity  
(Recommended exposure Index) set to Auto):  
approx. 0.2 to 7.0 m (7 7/8 inches to 22 feet  
11 5/8 inches) (W)/approx. 0.9 to 5.6 m  
(2 feet 11 1/2 inches to 18 feet 4 1/2 inches)  
(T)

#### [Input and Output connectors]

Multi connector: Video output

Audio output (Monaural)

USB communication

USB communication: Hi-Speed USB (USB 2.0  
compliant)

#### [LCD screen]

LCD panel: 6.2 cm (2.5 type) TFT drive

Total number of dots: 115 200 (480 × 240) dots

### [Power, general]

Power: Rechargeable battery pack NP-BG1, 3.6 V  
AC-LS5K AC Adaptor (not supplied), 4.2 V

Power consumption (during shooting): 0.95 W

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature: -20 to +60°C (-4 to +140°F)

Dimensions: 106.0 × 68.5 × 47.5 mm (4 1/4 ×  
2 3/4 × 1 7/8 inches) (W/H/D, excluding  
protrusions)

Mass: Approx. 380 g (13.4 oz) (including NP-  
BG1 battery pack, strap, adaptor ring, lens  
hood and lens cap, etc.)

Microphone: Monaural

Speaker: Monaural

Exif Print: Compatible

PRINT Image Matching III: Compatible

PictBridge: Compatible

### BC-CSG/BC-CSGB/BC-CSGC battery charger

Power requirements: AC 100 V to 240 V, 50/  
60 Hz, 2 W (BC-CSG/BC-CSGC)/  
2.6 W (BC-CSGB)

Output voltage: DC 4.2 V, 0.25 A

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature: -20 to +60°C (-4 to  
+140°F)

Dimensions: Approx. 62 × 24 × 91 mm (2 1/2 ×  
1 1/2 × 3 5/8 inches) (W/H/D)

Mass: Approx. 75 g (2.7 oz)

### Rechargeable battery pack NP- BG1

Used battery: Lithium-ion battery

 
Maximum voltage: DC 4.2 V

Nominal voltage: DC 3.6 V

Capacity: 3.4 Wh (960 mAh)

Design and specifications are subject to change  
without notice.

## Trademarks

- **Cyber-shot**, “Cyber-shot” are trademarks of Sony Corporation.
- “Memory Stick”, , “Memory Stick PRO”, **MEMORY STICK PRO**, “Memory Stick Duo”, **MEMORY STICK DUO**, “Memory Stick PRO Duo”, **MEMORY STICK PRO DUO**, “Memory Stick PRO-HG Duo”, **MEMORY STICK PRO-HG DUO**, “Memory Stick Micro”, “MagicGate”, and **MAGICGATE** are trademarks of Sony Corporation.
- Microsoft, Windows, DirectX and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh, Mac OS, iMac, iBook, PowerBook, Power Mac and eMac are trademarks or registered trademarks of Apple Inc.
- Intel, MMX, and Pentium are trademarks or registered trademarks of Intel Corporation.
- Google is a registered trademark of Google, Inc.
- Adobe and Reader are trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the <sup>TM</sup> or ® marks are not used in all cases in this manual.